



Telecom Grounding Jumpers and Mounting Hardware Kits

INSTALLATION INSTRUCTIONS T-PMPI-288-PC





© 2008 PANDUIT Corp.



<i>GJ672UH</i>	<i>GJ696UH</i>	<i>GJ6120UH</i>	<i>GJ6144UH</i>	<i>GJ6168UH</i>	<i>GJ6192UH</i>	<i>GJ6216UH</i>	<i>GJ6240UH</i>	<i>GJ6264UH</i>	<i>GJ6288UH</i>
72"	96"	120"	144"	168"	192"	216"	240"	264"	288"

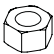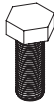

<i>GJS660U</i>	<i>GJS696U</i>	<i>GJS6120U</i>	<i>GJS6180U</i>
60"	96"	120"	180"

	<i>HDW1/4-KT</i>	<i>HDW1/4-A-KT</i>	<i>HDW3/8-A-KT</i>	<i>HDW3/8-KT</i>
 1/4-20 Nut SS	2	2	-	-
3/8-16 Nut SS	-	-	2	2
 1/4-20 Bolt SS	2	2	-	-
3/8-16 Bolt SS	-	-	2	2
1/4 Washer SS	4	4	-	-
3/8 Washer SS	-	-	4	4
1/4 Compression Washert SS	2	2	-	-
3/8 Compression Washert SS	-	-	2	2
 12-24 Screw	2	-	-	2
10-32 Screw	-	2	2	-
M6 Screw	2	-	-	2
 M5 Screw	-	2	2	-

General Assembly Notes

1. Clean all mating surfaces prior to installation using the cleaning pad (sold separately).
2. Apply a very thin layer of anti-oxidizing paste (sold separately) to all mating surfaces prior to installation.
3. All M6 Thread Forming Screws are to be fastened using a 7mm socket wrench and an installation torque of 35 in.-lbs.
4. All 1/4-20 Bolts are to be fastened using a 7/16" socket wrench and an installation torque of 7 Ft.-lbs.

For Technical Support: www.panduit.com/resources/install_maintain.asp

INSTALLATION INSTRUCTIONS T-PMPI-288-PC

